

PARTS LIST

for



30" ELECTRIC FREESTANDING SELF-CLEAN RANGE

MODEL
RF365PXXW0

▲W-White
N-Almond



FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



Whirlpool CORPORATION
Benton Harbor, Michigan.

 
©1990, 1991 WHIRLPOOL CORPORATION

4-91 Litho in U.S.A.

Part No. 884936 Rev A

COOKTOP PARTS

For Models: RF365PXXW0 and RF365PXXN0
(White) (Almond)

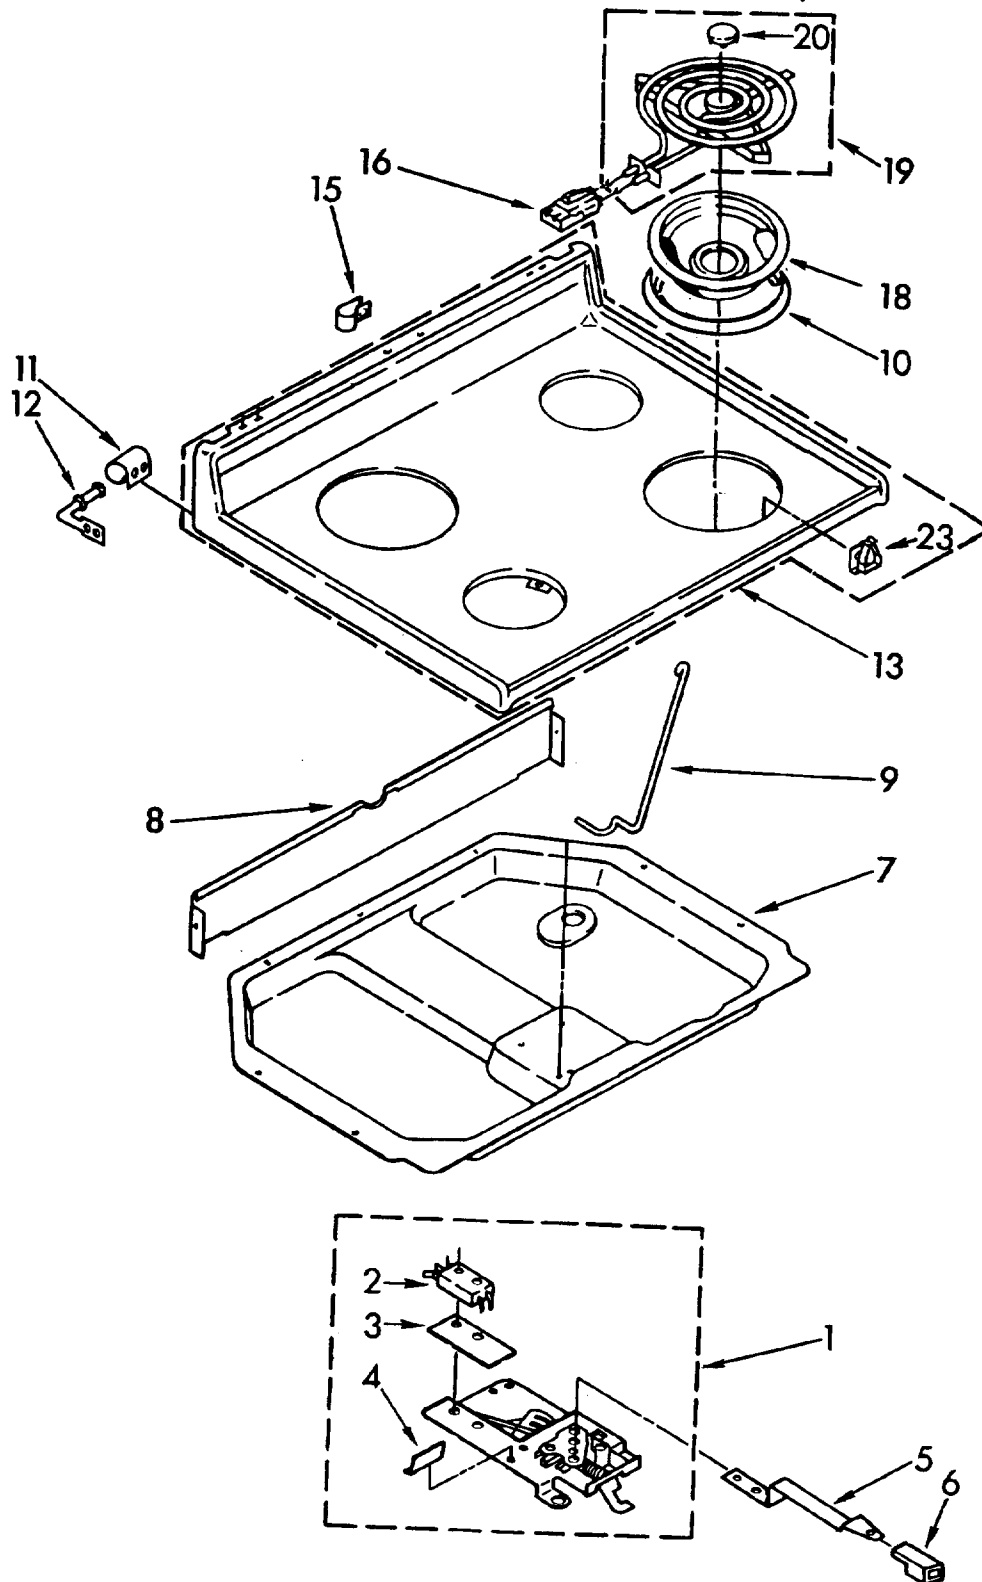

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3171153	Latch & Switch Assembly
	343641	Screw, 10-16 x 1/2 (2)
2	308185	Safety Switch
	98106	Screw (2)
3	309245	Insulator, Switch
4	313035	Shield, Latch Terminal
	309258	Screw, 6 x 3/8B (2)
	308422	Screw (2)
5	3147065	Handle, Latch
	155023	Screw, 8-18 x 1/4
6	3148684	Knob, Latch
7	3150186	Box, Burner
	309112	Screw, 10A x 3/8 (4)
8	307973	Shield, Wiring
	343641	Screw, 10-16 x 1/2 (4)
9	3148659	Rod, Cooktop
10		Ring, Adapter
	3150244	6" Element (2)
	3150245	8" Element (2) 10-16 x 1/2 (4)
11	307965	Bracket (2)
	343641	Screw (4)
12	307966	Pin, Cooktop (2)
	343641	Screw, 10-16 x 1/2 (4)
13		Cooktop
	3170981	White
	3170982	Almond
	690989	Screw, 10-32 x 1/2
15	308605	Strain Relief
	343641	Screw, 10-16 x 1/2
16	312606	Receptacle Clip (4)
	313808	Screw (4)
18		Pan, Reflector
	3150198	6" Element (2)
	3150199	8" Element (2)
19	660532	Unit, Surface 6" L.F. & R.R.
	660533	Unit, Surface 8" R.F. & L.R (Includes Illus. 20)
20	309195	Medallion (4)
23	3148790	Hold Down Clip (4)
	814102	Nut (4)
	487887	Screw (4)


FOLLOWING PARTS NOT ILLUSTRATED

LITERATURE PARTS

LIT3147389	Installation Instructions
LIT3169007	Wiring Diagram
LIT3150267	Use & Care Guide
LIT3149507	Cooking Guide
LIT884936	Repair Parts List

CONTROL PANEL PARTS

 For Models: RF365PXXW0 and RF365PXXN0
(White) (Almond)

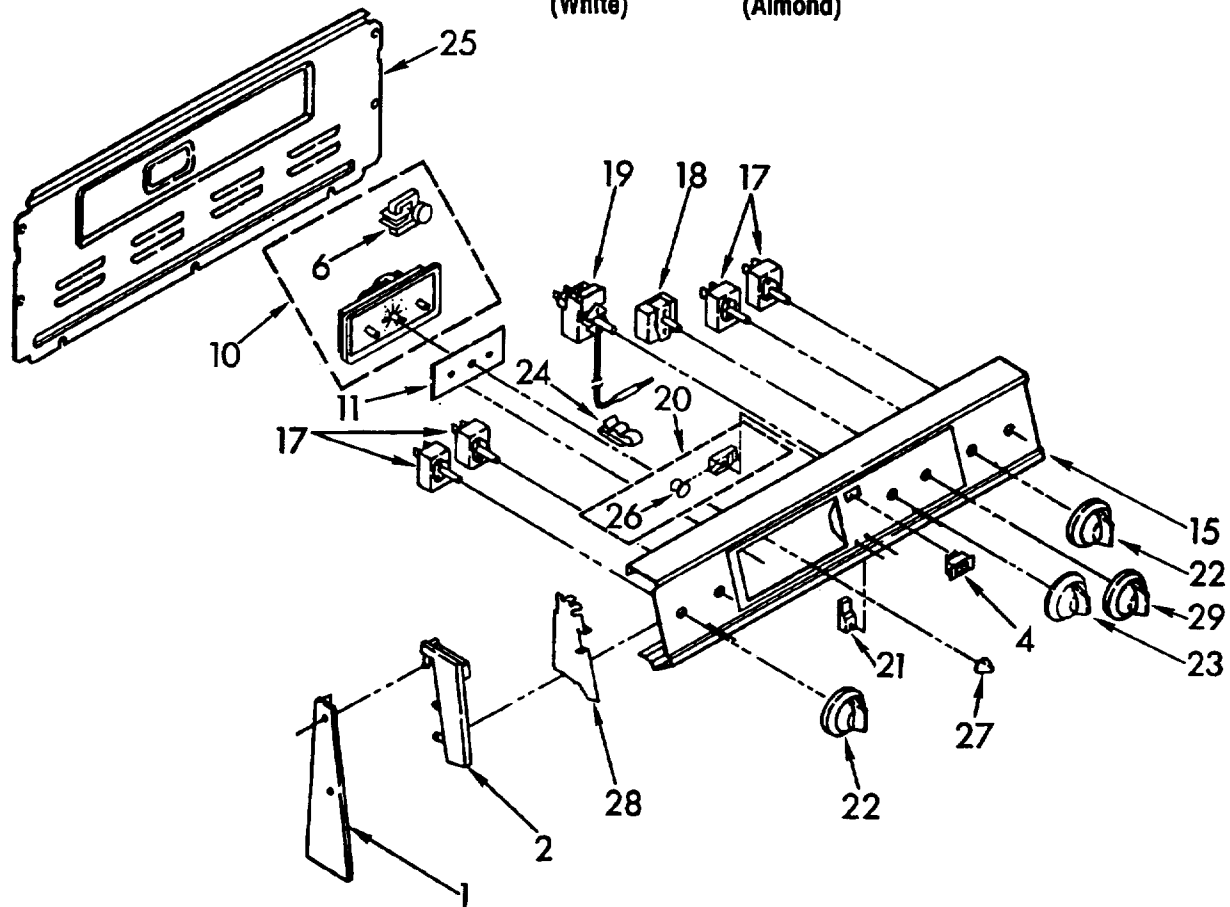


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	313191	End Trim R.H.
	313190	End Trim L.H.
	309112	Screw, 10A x 3/8 (2)
	343641	Screw, 10-16 x 1/2 (4)
2	313230	End Cap R.H.
	313231	End Cap L.H.
	254225	Screw, 8BT x 1/4 (4)
4	3148564	Switch, Rocker
6	309822	Timer Motor
10	3149505	Timer, Clock (Includes #6)
	246132	Screw, 8A x 3/8 (2)
11	313513	Glass, Timer
15	3150628	Panel, Control
	312604	Screw, 8-18 x 5/8 (4)
	690989	Screw, 10-32 x 1/2
17		Switch, Infinite
	3148952	6" Element (2)
	3148954	8" Element (2)
	311865	Screw, 8-32 x 1/4 (8)
18	3148419	Switch, Selector (5 Position)
	3150344	Screw, 8-32 x 1/4 (2)
19	3148933	Thermostat, Oven Pyro
	311932	Screw, 6-32 x 1/4 (2)
20	314031	Light, Indicator (Oven Unit On) (Includes Illus. 26)
21	3150647	Light, Indicator (Surface Unit On) (Includes Illus. 26)
22	3149983	Knob, Infinite (4)
23	3149988	Knob, Thermostat
24	313570	Tube Clip
25	313195	Rear Cover Control Panel
	343641	Screw, 10-16 x 1/2 (8)
26	313101	Lens, Amber (2)
27	330206	Knob, Timer (3)
	313311	Spring, Knob
28	313608	Shield, Glass (2)
	246132	Screw, 8A x 3/8 (2)
29	3149986	Knob, Selector

OVEN PARTS

 For Models: RF365PXXW0 and RF365PXXN0
(White) (Almond)

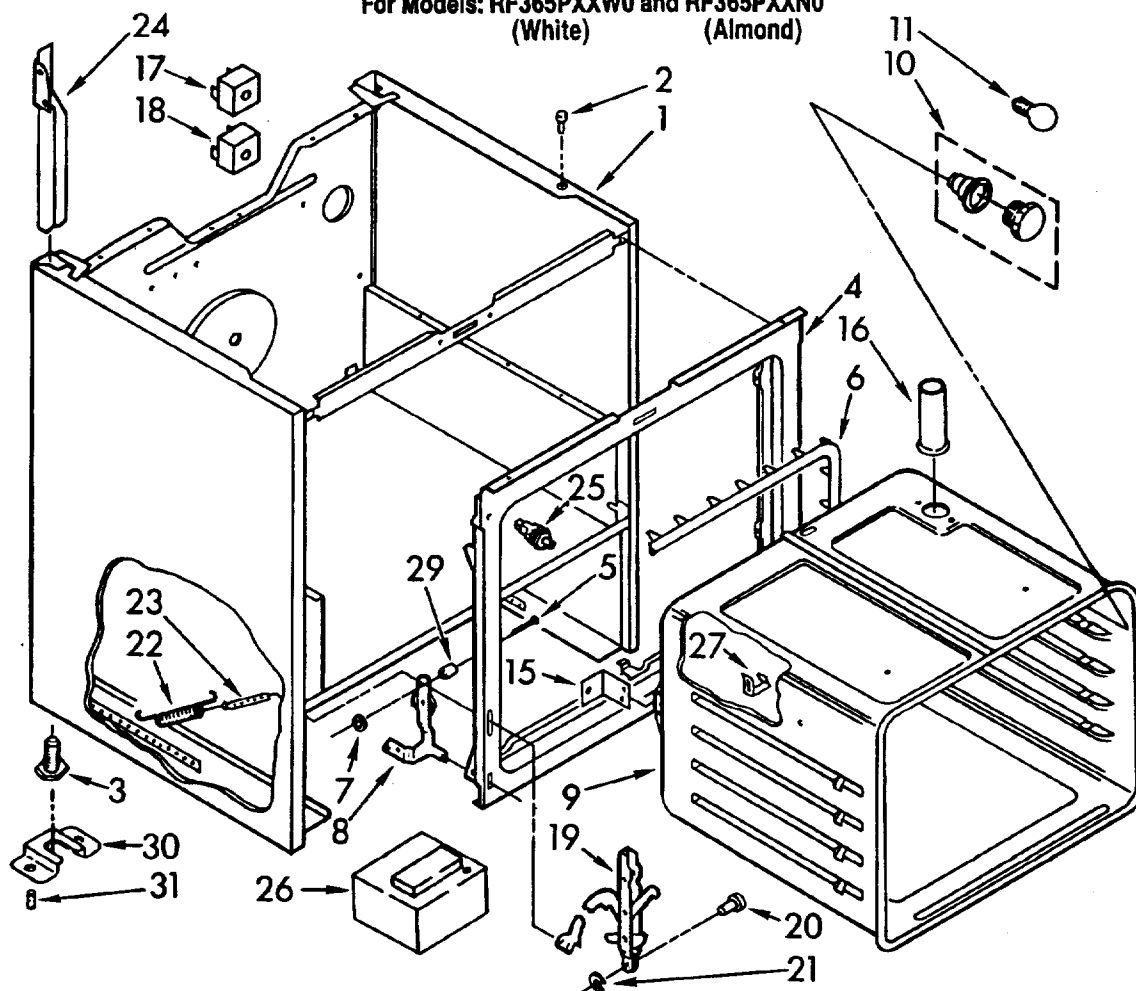

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Main Chassis
	330086	White
	330090	Almond
	690989	Screw, 10-32 x 1/2
	343641	Screw, 10-16 x 1/2 (2)
2	238614	Bumper, Cooktop (2)
3	3150150	Leg Leveling (4)
4	3172194	Frame, Front
	343641	Screw (Sides)
	3150537	Screw (Top)
5	307985	Pin, Hinge
6	3148284	Seal, Door
7	308306	Pushnut
8	327890	Hinge, R.H.
	327891	Hinge, L.H.
	343641	Screw, 10-16 x 1/2 (4)
9	3172547	Oven (30" Pyro)
	311056	Screw (2)
	3150537	Screw
10	3150505	Socket, Lamp
11	311255	Bulb, Oven Light
15	311220	Bracket, Oven Mounting
	343641	Screw, 10-16 x 1/2 (4)
16	307961	Vent, Oven
	307748	Screw, 10A x 1/2 (2)
17	314209	Switch, Broil
18	314210	Switch, Bake
19	329710	Channel, Arm (2)
20	307986	Hinge Pin (2)
21	307594	Ring, Retainer (2)
22	308126	Spring, Oven Door (2)
23	308125	Anchor, Spring (2)
24	313196	Support, L.H. Channel
	313197	Support, R.H. Channel
	343641	Screw, 10-16 x 1/2 (4)
25	310345	Switch, Door
26	312804	Block, Balance
	340184	Screw
27	313382	Clip, Therm Bulb (2)
29	309111	Snubber, Door (2)
30	3148603	Bracket, Anchor
	3148604	Screw (2)
31	3148605	Anchor, Plastic


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

3169093	Insulation, Wrap
3169094	Insulation, Oven Back

DOOR AND DRAWER PARTS

 For Models: RF365PXXW0 and RF365PXXN0
(White) (Almond)

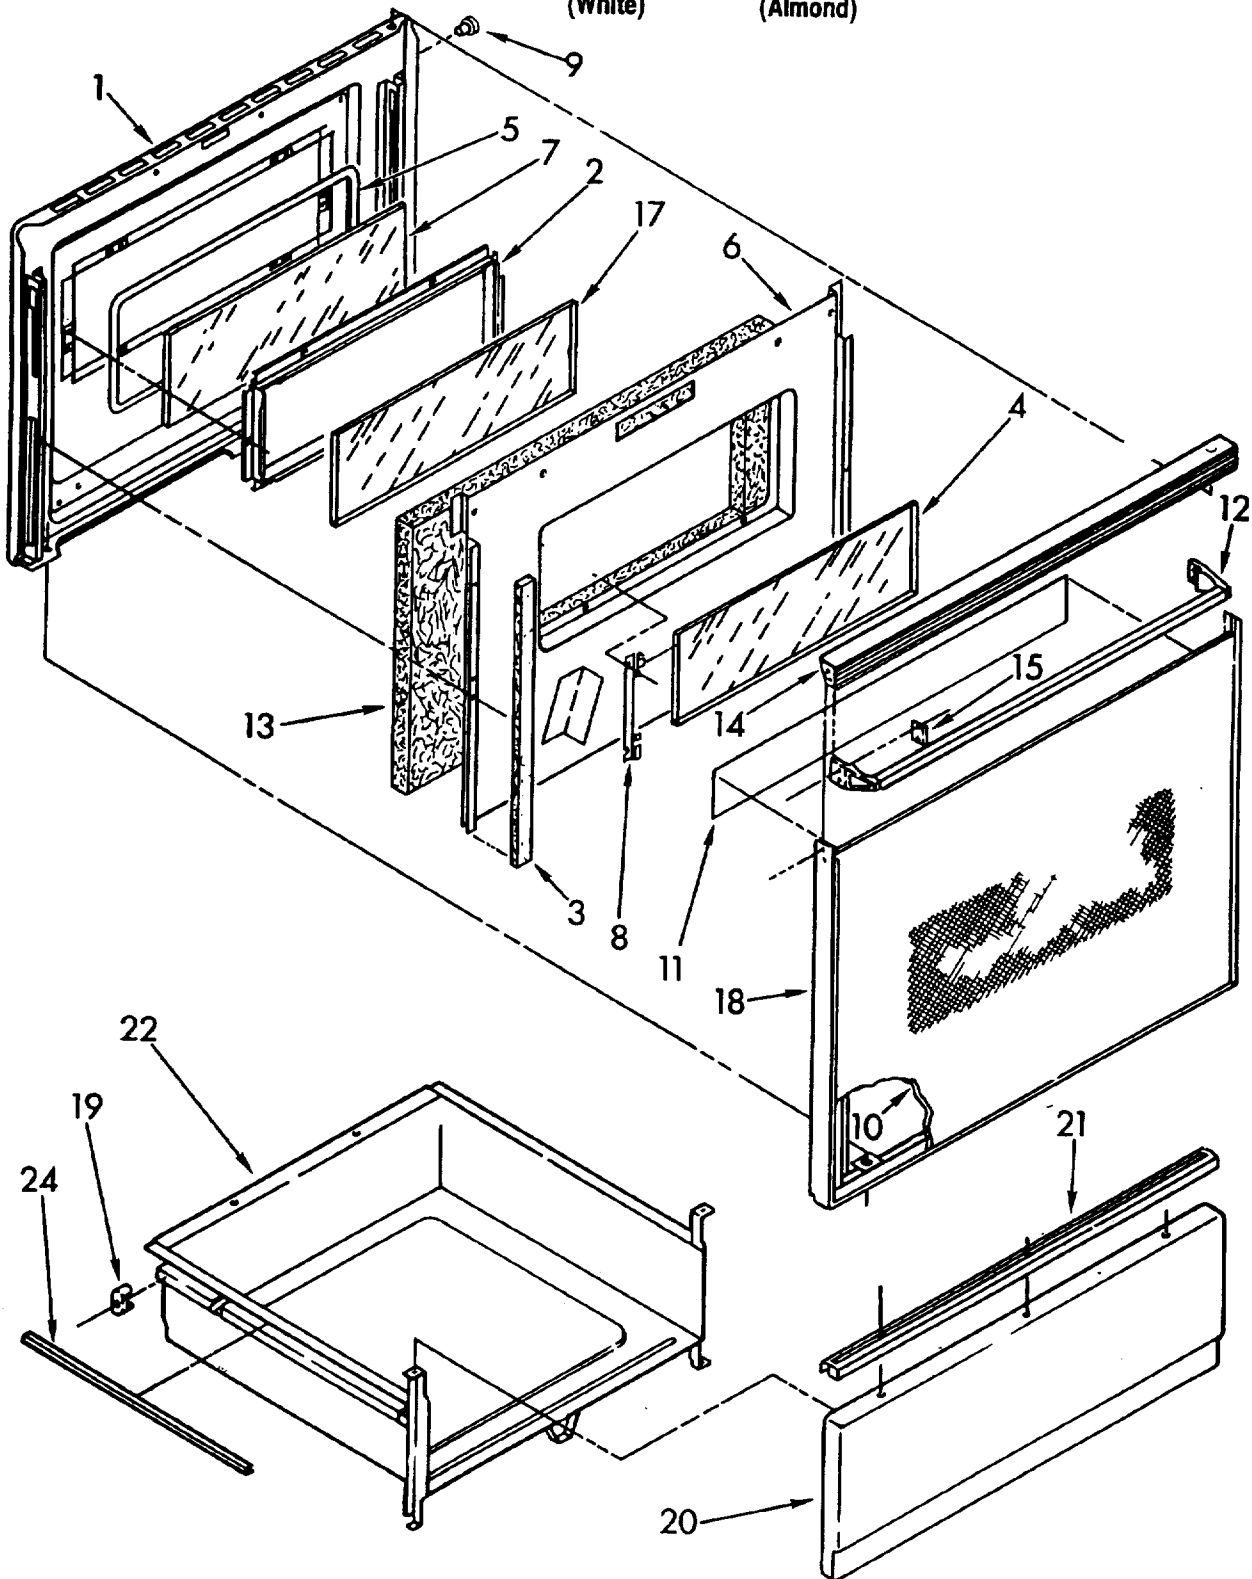


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172218	Liner, Oven Door
2	3148234	Frame, Glass
	3148443	Screw (6)
3	3148441	Seal, Foam
4	3148178	Glass, Reflective
5	3148183	Seal, Window
6	3148159	Retainer, Insulation
	3148443	Screw (4)
7	313004	Glass, Inside
8	3148187	Retainer, Glass
	3148443	Screw (4)
9	3148182	Bumper (4)
10	3148185	Glass, Door
11	3148184	Foil
12	3148228	Handle, Door
13	3147951	Insulation, Door
14	3148223	Top, Door
15	3148282	Clip (2)
17	313005	Glass, Outer
18	3148235	Frame, Glass
	355515	Screw (4)
	3149333	Screw (3)
19	307980	Glide, Rear
	307748	Screw (2)
20		Panel, Drawer
	307935	White
	307939	Almond
21	313337	Handle, Drawer
	313349	Screw (2)
22	327887	Drawer, Utility
24	309329	Protector, Drawer (2)

UNIT PARTS

 For Models: RF365PXXW0 and RF365PXXN0
(White) (Almond)

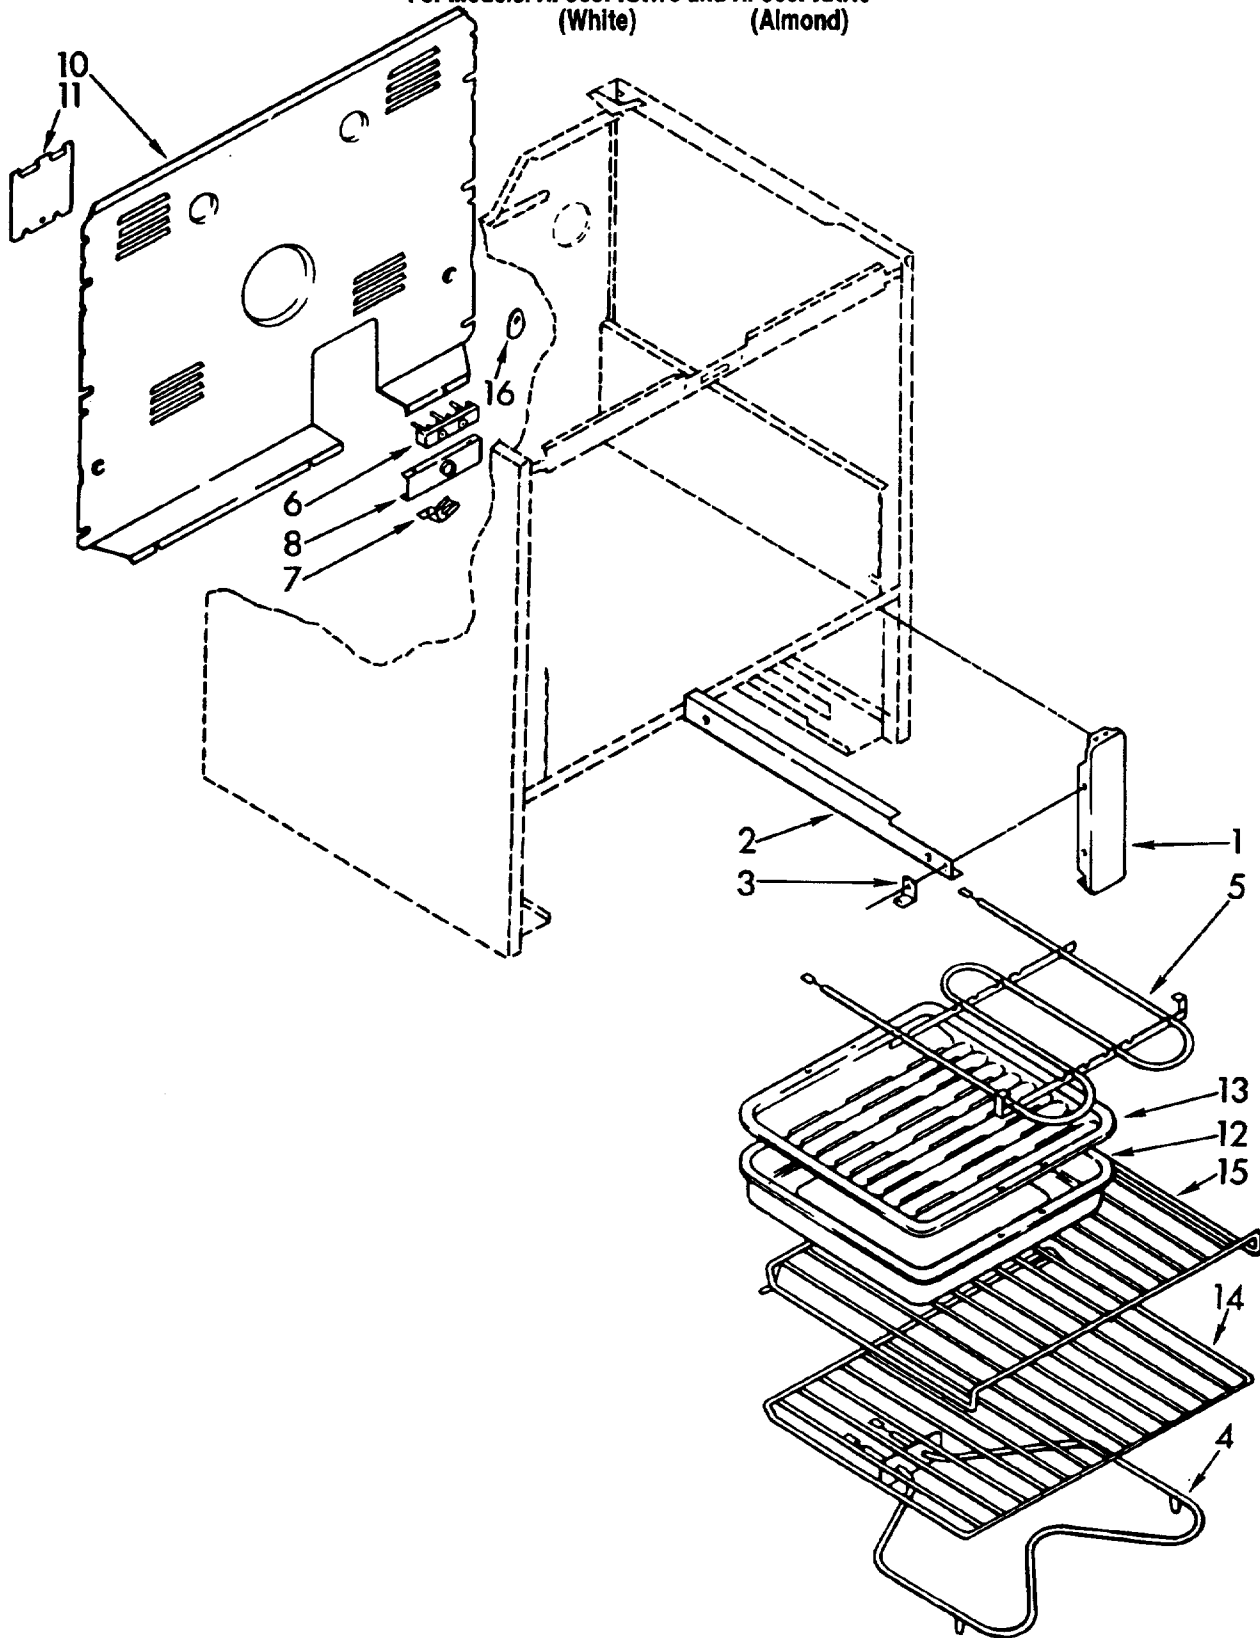

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE:The screws and nuts required to attach a part are listed immediately following that part.

1	307981	Bracket, Mounting (2)
2	3149255	Rail R.H. (Includes Illus. 3)
	3149256	Rail L.H. (Includes Illus. 3)
	343641	Screw, 10-16 x 1/2
3	3149257	Glide, Front (2)
4	661170	Unit, Bake (240V)
		308180 (Alt.)
		313827 (Alt.)
	312309	Unit, Bake (208V)
	3150532	Screw (2)
5	660579	Unit, Broil
		311714 (Alt.)
		311713 (Alt.)
	312308	Unit, Broil (208V)
	3150532	Screw (2)
6	258076	Terminal Block
	98884	Screw, 10-16 x 1 (2)
	112432	Nut (6)
7	308498	Ground Strap
	313660	Clip
	690989	Screw, 10-32 x 1/2
8	3150190	Bracket, Service
	343641	Screw, 10-16 x 1/2 (2)
10	3148975	Cover, Rear
	343641	Screw, 10-16 x 1/2 (7)
11	307972	Cover, Service
	343641	Screw, 10-16 x 1/2 (2)
12	3169076	Pan, Broiler
13	3147563	Rack, Broiler
14	308173	Rack, Oven (Straight)
15	308172	Rack, Oven (Offset)
16	311982	Plate, Cover (2)
	307748	Screw, 10A x 1/2 (2)

FOLLOWING PARTS NOT ILLUSTRATED

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~c
242820	Wire, Black 14 Ga. 150~c
242821	Wire, Blue 14 Ga. 150~c
242822	Wire, Brown 14 Ga. 150~c
242830	Wire, Brown 14 Ga. 200~c
242823	Wire, Green 14 Ga. 150~c
242824	Wire, Orange 14 Ga. 150~c
242829	Wire, Red 12 Ga. 150~c
242825	Wire, Red 14 Ga. 150~c
242831	Wire, Red 14 Ga. 200~c
242826	Wire, White 14 Ga. 150~c
242827	Wire, Yellow 14 Ga. 150~c
242832	Wire, Yellow 14 Ga. 200~c

PAINT, TOUCH UP (1/2 oz.)

72017	White
-------	-------

72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
72112	Toast
72113	Platinum
**511873	White Porcelain (2 Oz.)

PAINT PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285365	Toast
285366	Platinum
285006	Superior Black
206922	Primer (White)
206925	Leveler (Thinner) (2 oz.)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261887	Coffee (Uncut)
261891	Harvest Gold (Uncut)
285367	Toast (Uncut)
285368	Platinum (Uncut)

**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

REFINISHING MATERIAL


799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean (1/2 Pt.)
261582	Grease

ACCESSORY PARTS

242985	Rotisserie Kit
241430	Foil, Aluminum Oven (18" x 25')

WIRING HARNESS PARTS

 For Models: RF365PXXW0 and RF365PXXN0
(White) (Almond)

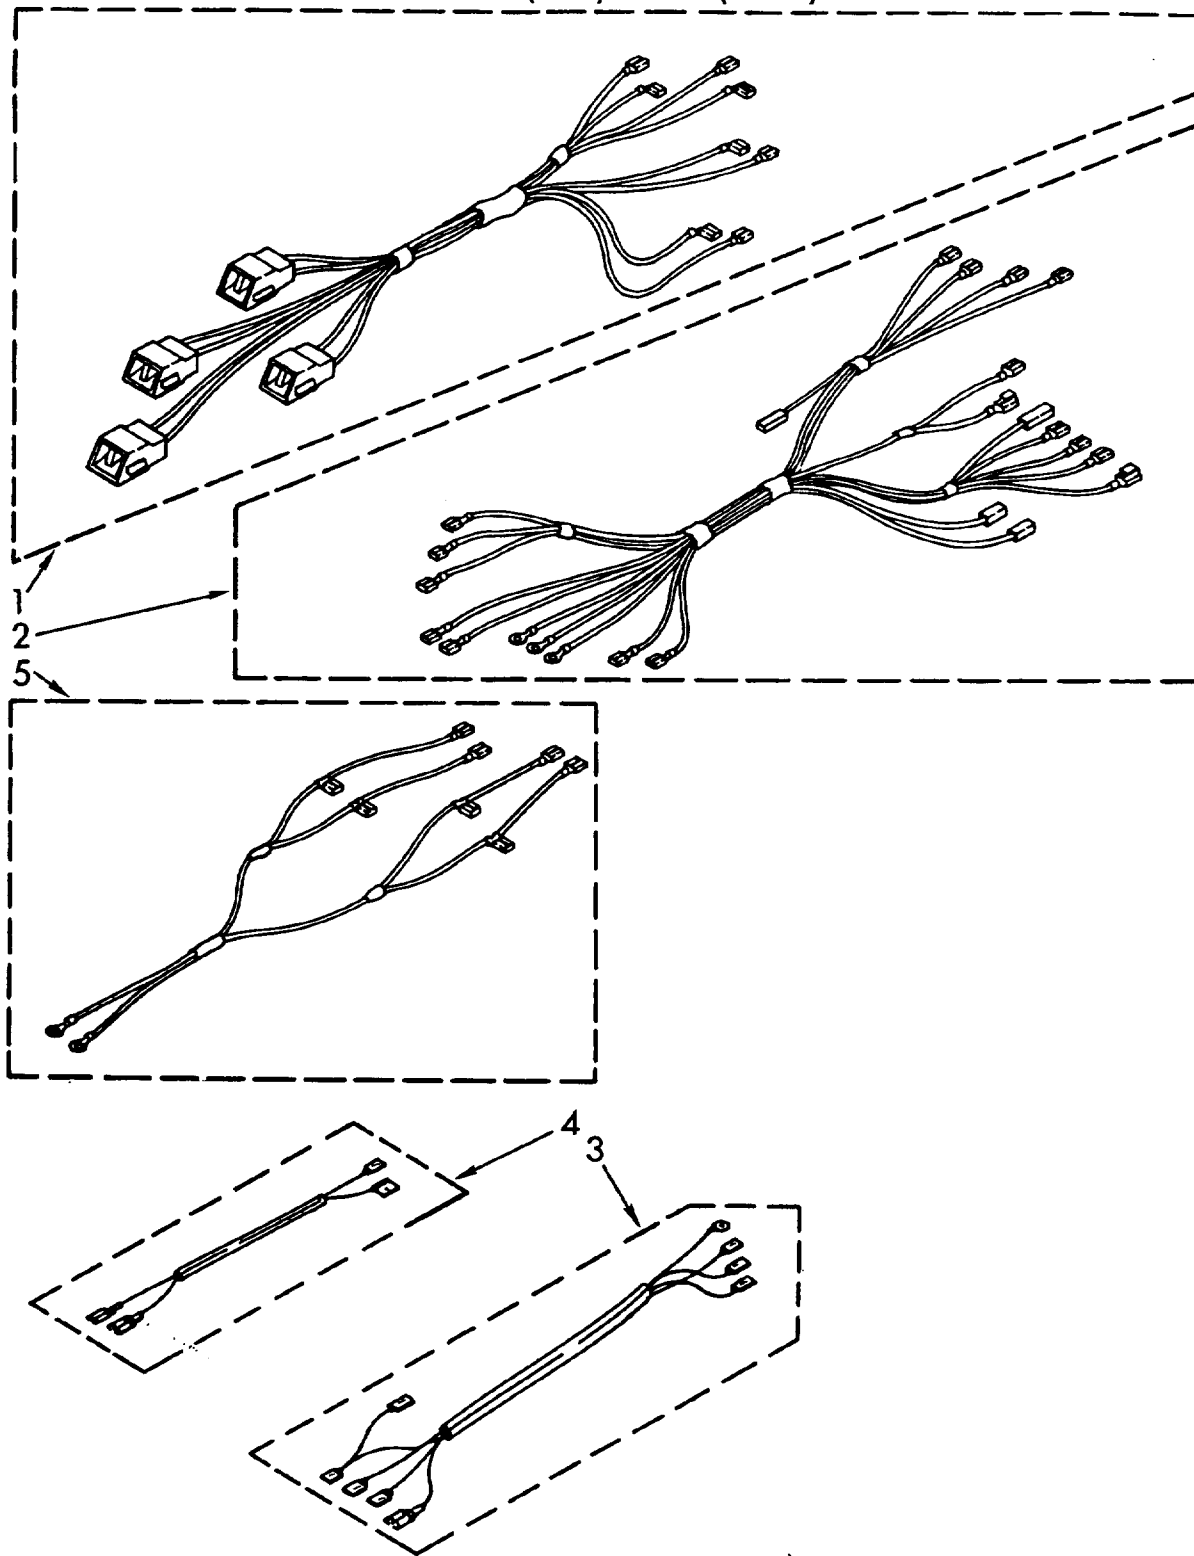

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	3149881	Wiring Harness (Surface Unit)
2	3169011	Wiring Harness (Oven)
3	3169012	Wiring Harness (Lock Switch)
4	313152	Harness, (Oven Light)
5	313147	Harness, (Supply)